

 
RYOBI®

OPERATOR'S MANUAL

Dustbag

4070300

(For use with BT3000 & BT3100 Table Saws)

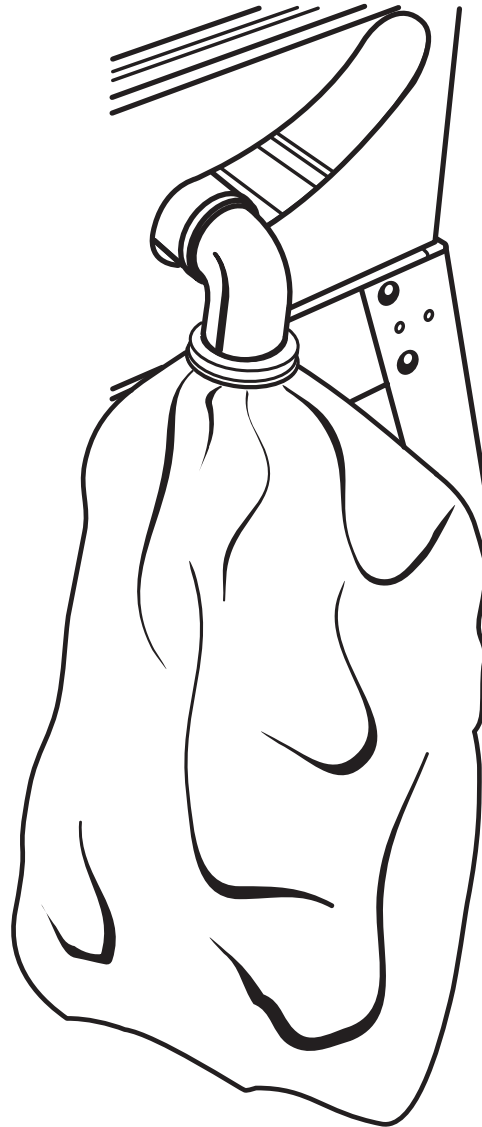

Your new dustbag has been engineered and manufactured to Ryobi's high standard for dependability, ease of operation and operator safety. Properly cared for, it will give you years of rugged, trouble-free performance.



WARNING: To reduce the risk of injury, the user must read and understand the operator's manual.

Thank you for buying a Ryobi accessory kit.

SAVE THIS MANUAL FOR FUTURE REFERENCE

RULES FOR SAFE OPERATION

Safe operation of this accessory requires that you read and understand this operator's manual, the operator's manual for the table saw and all labels affixed to the accessory and/or tool.

READ ALL INSTRUCTIONS

- **KNOW YOUR ACCESSORY.** Read the operator's manual carefully. Learn the product's applications and limitations as well as the specific potential hazards related to this product.
- **KEEP THE WORK AREA CLEAN.** Cluttered work areas and work benches invite accidents. **DO NOT** leave tools or pieces of wood on the saw while operating.

- **ALWAYS WEAR SAFETY GLASSES WITH SIDE SHIELDS.** Everyday eyeglasses have only impact-resistant lenses; they are **NOT** safety glasses.
- **DO NOT USE THIS PRODUCT WITH OTHER EQUIPMENT** or for other purposes.
- **ALWAYS DISCONNECT THE SAW FROM THE POWER SUPPLY BEFORE ASSEMBLING THIS KIT.** Make sure switch is off when reconnecting the saw to a power supply.
- **SAVE THESE INSTRUCTIONS.** Refer to them frequently and use them to instruct other users. If you loan someone this product, also loan these instructions.

UNPACKING

INFORMATION


- Remove the loose parts from the box. Make sure that all items listed in the loose parts list are included.
- Inspect all parts carefully to make sure no breakage or damage occurred during shipping.
- If any parts are damaged or missing, please call 1-800-525-2579 for assistance.

LOOSE PARTS LIST

1. Elbow
2. Dust Bag

WARNING:

If any parts are missing, replace the missing parts before assembling the kit. Failure to do so could result in serious personal injury.

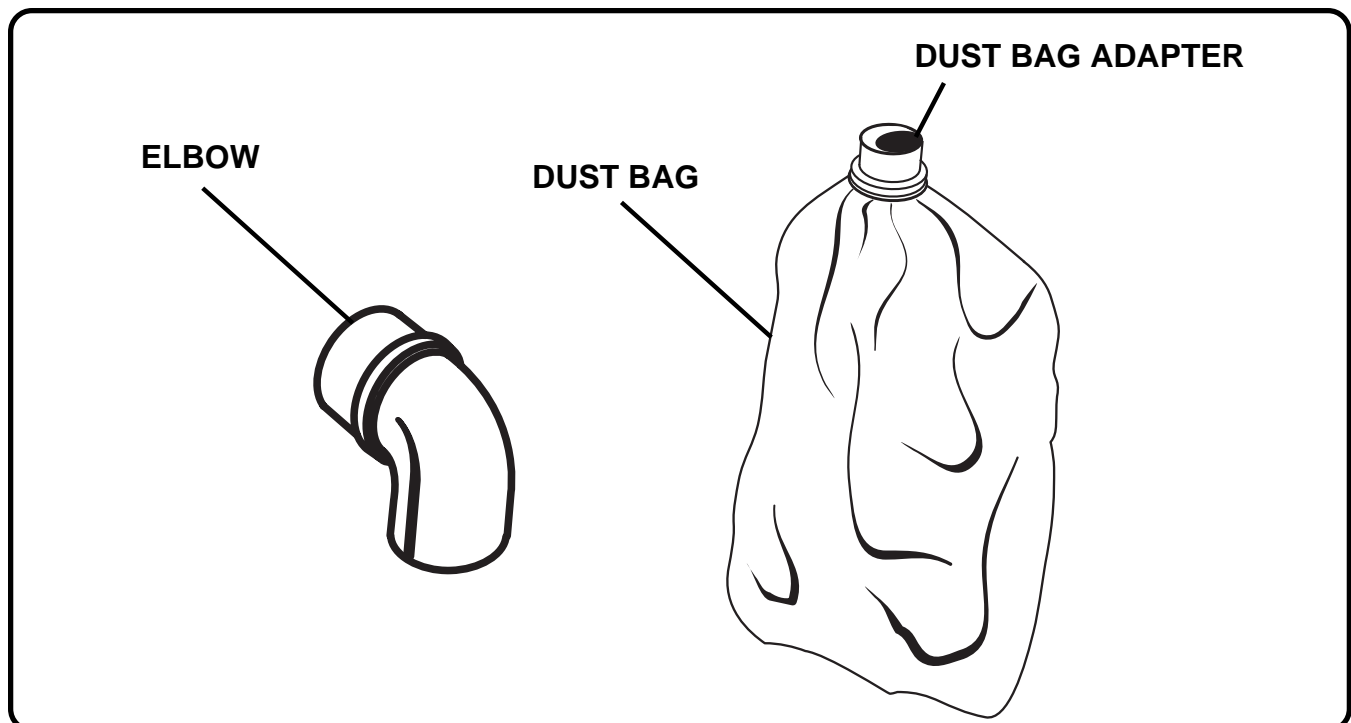

ASSEMBLY

⚠ WARNING:

The table saw should never be connected to a power supply while you are assembling parts. Disconnecting the table saw will prevent accidental starting that could cause serious personal injury.

FITTING THE ELBOW TO THE DUST COLLECTION CHUTE

For BT3000 and BT3100

See Figure 1.

The elbow fits inside the dust collection chute on the table saw.

- Slide the elbow into the chute.

CONNECTING THE DUST BAG TO THE ELBOW

For BT3000 and BT3100

See Figure 2.

The dust bag adapter fits inside the elbow.

- Slide the dust bag adapter into the elbow as shown.

For efficient operation, empty the dust bag before it is half full. Doing so will permit better air flow through the bag.

⚠ WARNING:

Collected dust from sawing surface coatings such as polyurethanes, linseed oil, etc. can self-ignite in your dust bag or elsewhere and cause fire. To reduce the risk of fire, always empty your dust bag frequently (10-15 minutes) while sawing and never store or leave a saw without totally emptying its dust bag. Also follow the recommendations of the coatings manufacturers.

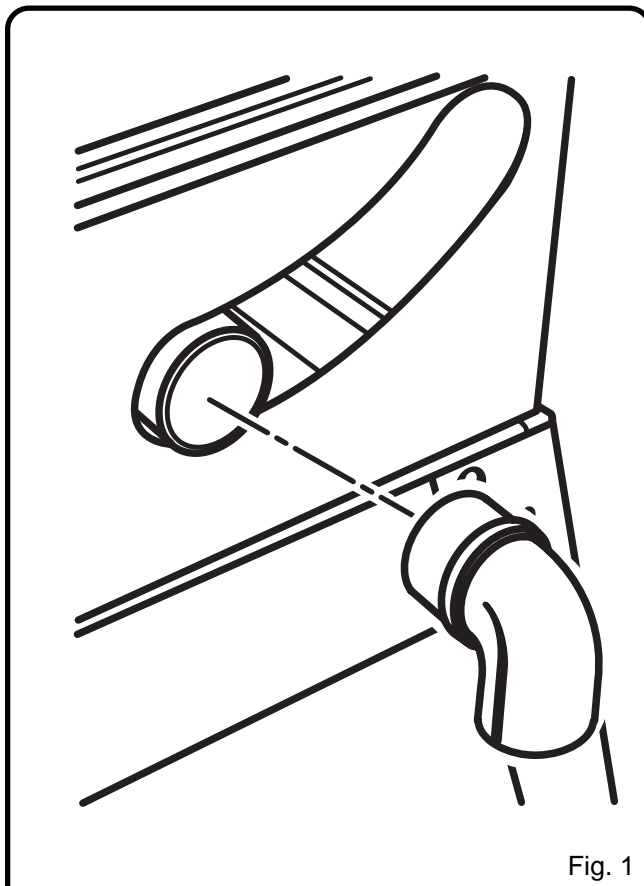 


Fig. 1

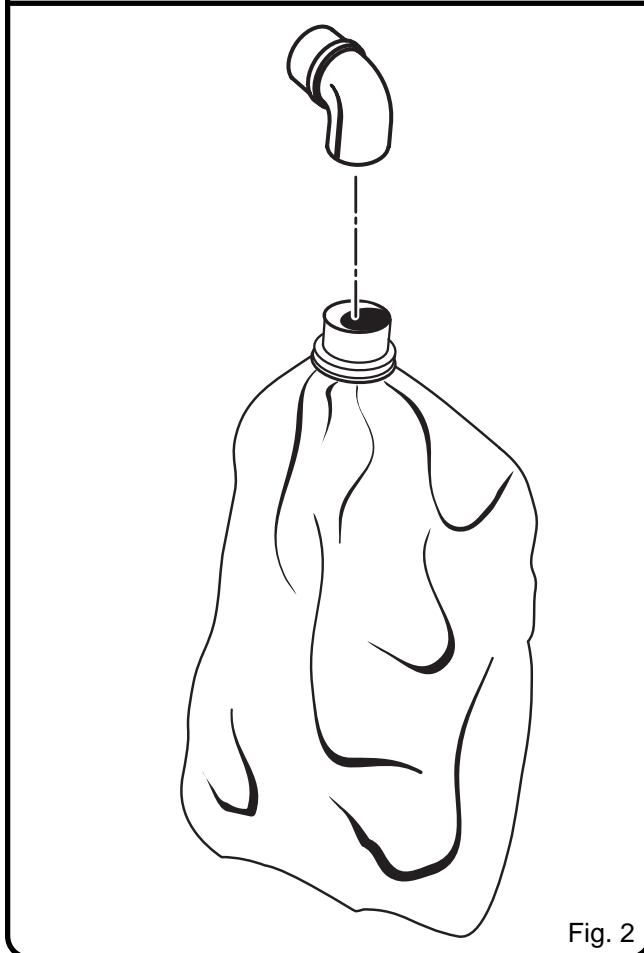 


Fig. 2



OPERATOR'S MANUAL

Dustbag

4070300

WARRANTY

Ryobi warrants its accessories for a period of 90 days from the date of purchase. Batteries and chargers are warranted for a period of two years from the date of purchase.

PARTS AND SERVICE

For parts or service, contact your nearest Ryobi authorized service center. Be sure to provide all relevant information when you call or visit. For the location of the authorized service center nearest you, please call 1-800-525-2579 or visit us online at www.ryobitools.com. When ordering parts, always give the model number:

4070300

RYOBI TECHNOLOGIES INC.

1428 Pearman Dairy Road Anderson, SC 29625
Post Office Box 1207 Anderson, SC 29622
1-800-525-2579 www.ryobitools.com